

Manual de instruções
Instruction manual



BASS 800
AMPLIFIER - 800 WATTS RMS
1 OHM
2 OHMS



A instalação deste produto deverá ser feita por um profissional qualificado.
The installation of this product must be made by a qualified professional.

Index

- 07 • Term of warranty
 - Technical assistance
- 08 • Introduction
 - Safety requirements
 - Safety
- 09 • Functions & inputs
 - LEDS indicator
- 10 • Output & power supply connector
 - Protection system
- 11 • Installation
 - Recommended wire gauge & fuse
- 12 • Technical features

Term of warranty

TARAMPS, located on Abilio Daguano Street 274, Res. Manoel Martins – Alfredo Marcondes, SP - Brazil, ZIP CODE 19180-000, guarantees this product against any defects on terms of project, making, assembling, and/or with solidarity, due to project vices which cause it improper or inadequate to its original use within 12 months from the date of purchase. In case of defect during the warranty period, TARAMPS responsibility is limited to the repairing or replacement of the device of its own making.

This warranty excludes:

- Damaged products by improper installation, water infiltration, violation by unauthorized individuals;
- Tamper or torn warranty seal;
- Cases in which the product is not used in adequate conditions;
- Defects caused by accessories, modifications or features attached to the product;
- The product with damage from falling, bumps or nature related problems (flooding, lightning, etc);
- Warranty card is not properly filled or torn;
- Costs involving uninstallation, reinstallation of equipment as well the shipment to the factory;
- Damage of any kind, due to problems in the product, as well as losses caused by discontinued use of the product.

Technical assistance

For international support, check on our website:

www.taramps.com.br/en/rede-de-assistencias-tecnicas or contact direct the factory support:

Phones: +55 18 3266-4050 / +55 18 99749-3391

E-mail: service@taramps.com.br

Introduction

Read this manual before preparing the product. In case of doubt, contact our technical support: **(18) 3266-4050** or www.taramps.com.br.



At the end of its useful life, this product must not be disposed of in household waste. Look for an electronic equipment collection or recycling center for proper disposal.

Declaration of Conformity	
CE	TARAMPS ELECTRONICS LTDA Alfredo Marcondes - SP Brazil
Hereby, Taramps Electronics Ltda declares that the product BASS 800 complies with the Directive 2014/30/EU, according with the following harmonized standard:	
-EN 50498:2010 <i>Electromagnetic compatibility (EMC) - Product family standard for aftermarket electronic equipment in vehicles</i>	
The full text of the EU Declaration of Conformity is available at the following Product Page on Internet.	

Safety requirements

To ensure proper use, please read through this manual before using the amplifier. It is specially important that you know the **CAUTIONS** contained here.

- The installation of this amplifier must be done by a qualified professional.
- Wear safety glasses, insulated gloves and correct tools for installing this product.
- This amplifier is for use with 12V batteries. Always check the voltage before installing.
- This amplifier must be installed in a firm place with at least 1" space around the heatsink for proper heat spreading.
- Never install the amplifier in places exposed to dust, humidity and water. Pay attention to install it far from fuel tank, fuel lines, heat sources and other parts of vehicle.
- Be sure to install protection fuse or a circuit breaker near to battery. Follow the ampere rating as indicated here in this manual. Use of improper fuse or circuit breaker could result in overheat, smoke, damage to product, injury or burns.
- Avoid running wires over or through sharp edges. Use rubber or plastic grommets to protect any wires routed through car's body.
- Before make any connection to amplifier, disconnect the battery negative terminal.
- When in use, the external surface of may amplifier becomes hot. Avoid touching the heatsink area and keep childrens far from the amplifier.
- This amplifier may produce high sound pressure levels. Avoid continuous exposure to levels over 85dB to prevent permanent hearing loss.
- Output connections for speakers may have voltage levels when the amplifier is operating. Make sure that the amplifier is turned OFF before proceed any connection or disconnection in this terminals.
- If you want to dispose this amplifier, don't throw it on domestic waste. It must be collected by an used electronic product disposal service for proper recycling.

Safety

Pay attention to the safety symbols.


CAUTION

This symbol with **"CAUTION"** is intended to alert the user to the presence of important instructions. Failure to heed the instructions will result in risk of injury to user or product damage.



Taramps reserves the right to modify the contents of this document at any time without prior notice and does not have the obligation to apply the changes in units which were previously produced.

Functions & inputs

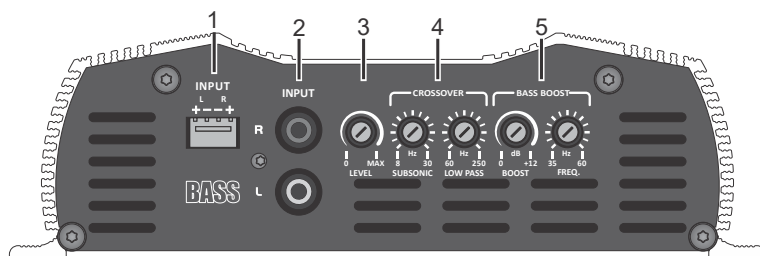

1 - INPUT FOR SIGNALS L / R (HIGH LEVEL): Signal connectors to be amplified. Connect them to the hi-level output connections (WIRES) from CD / DVD player.

Attention: Using this connector, the connection of the REMOTE cable is isn't required because the BASS 800 amplifier has an audio recognition system which turn on the amplifier automatically.

In order to keep the amplifier ON, a minimum volume is required, around 2 to 5 (varying according to song or CD player model). Notice that in case CD player is turned on with volume=0, the amplifier won't turn on.

In cause of absence of audio or turning CD player off, the amplifier will still remain on for around 30 seconds.

2 - INPUT: Inputs of signals to be amplified. Connect these signals to RCA outputs of CD/DVD Player, using good quality shielded cables to avoid noise interference.

3 - LEVEL: It sets the amplifier input sensitivity, which allows an optimal adjustment to the output signals levels of nearly all models of CD/DVD Players found in the market.

4 - CROSSOVER

SUBSONIC: Variable adjustment from 8Hz to 30Hz, which determines the beginning of the amplifier operating frequency.


LOW PASS: Variable adjustment from 60Hz to 250Hz, which determines the end of the amplifier operating frequency.

5 - BASS BOOST:

BOSST: Boost for bass signals with variable range from 0 to + 12dB.


FREQ: Set the Bass Boost center frequency, from 35Hz up to 60Hz.

LEDs indicator



ON: Indicates that the amplifier is turned on.


CLIP: Indicates that the amplifier is operating at the threshold of the distortion.

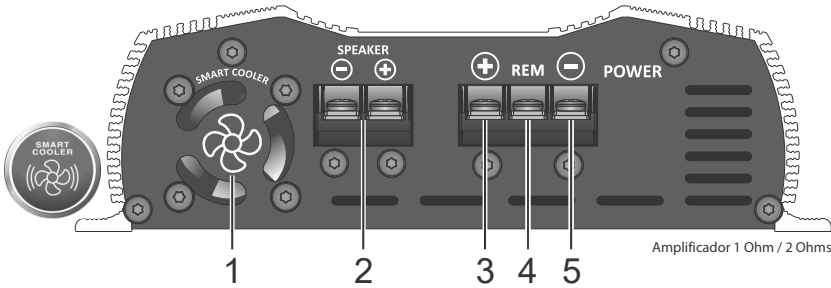

1 - FAN: The BASS 800, has one internal fan, and cannot be blocked. This fan is controlled by an intelligent system (**Smart Cooler**). The fan only runs at maximum speed after the product reach a certain temperature level. This function ensures long fan life and silent operation of your amplifier.

2 - SPEAKER: Output (positive and negative) to loudspeakers connection. Follow the polarity described and the minimum impedance recommended.

To combine loudspeakers, the resulting impedance must be taken into consideration.

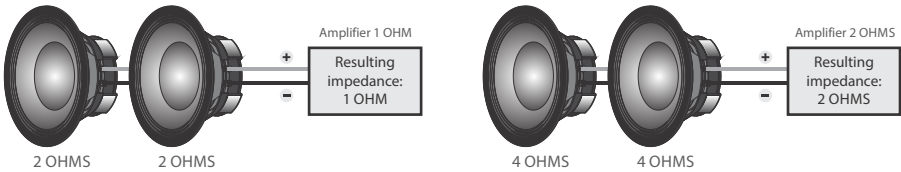

3 - POSITIVE POWER SUPPLY TERMINAL: Use a 10mm² (7 AWG) cable directly from the positive battery terminal with fuse (50A), as close as possible from the battery.

4 - REMOTE TERMINAL: The remote CD/DVD Player output must be connected by a 0.75mm² (18 AWG) cable.

5 - NEGATIVE POWER SUPPLY TERMINAL: A 10mm² (7 AWG) cable as short as possible must be used, connected to the negative battery pole.

It is recommended that all cables must have tinned ends to improve electrical contact.

CAUTION Before making any connections to the power terminals, make sure that the negative (-) of the vehicle battery is disconnected.

Protection systems

SHORT-CIRCUIT PROTECTION: Shutdown the amplifier when detect a short-circuit or impedance lower than the supported at the output.

LOW VOLTAGE PROTECTION: Shutdown the amplifier if the battery voltage is below 9V.

HIGH VOLTAGE PROTECTION: Shutdown the amplifier if the battery voltage is above 16V.

Installation

CAUTION CAUTION: All connections to power supply, input and output connectors must be carried out only with amplifier off.


Recommended wire* gauge & fuse

Positive / negative power supply cable _____ **7 AWG**
 Output cables wire gauge _____ **11 AWG**
 Remote cable _____ **18 AWG**
 Protection fuse or circuit breaker _____ **50A**

*Calculated considering a maximum length of 4m. Distance greater than this, you will need to increase the cable gauges.

CAUTION Using wire gauges below the recommendation will result in power loss and overheating of wiring.

Check polarity and never reverse power supply cables due to the risk of damage to the amplifier. It is compulsory to install a protection fuses or circuit breakers as close as possible from batteries.

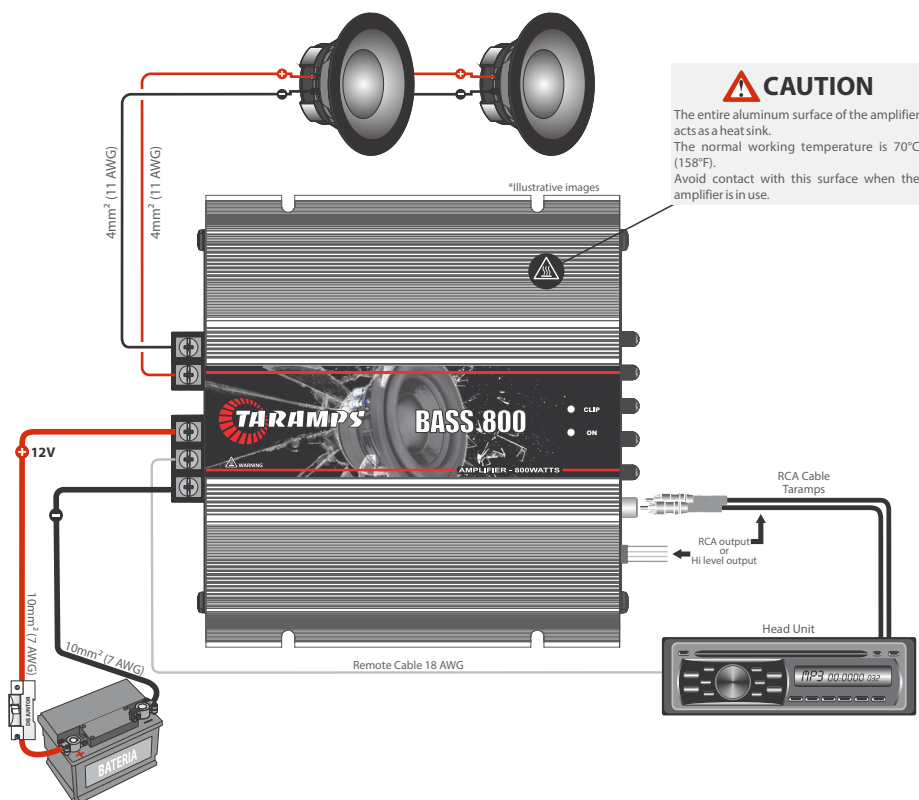

At least 50A/h required battery capacity

CAUTION This equipment is not suitable for use in places where children may be present.

Technical features

ENGLISH

Minimum Output Impedance:	1 OHM	2 OHMS
Number of Channels:	1	
Output Power @14.4VDC - 1 OHMS:	800W RMS*	-
Output Power @14.4VDC - 2 OHMS:	560W RMS	800W RMS*
Output Power @14.4VDC - 4 OHMS:	-	560W RMS
Input Sensitivity (Level 100%):	220mV	
Signal- to-noise Ratio:	>90dB	
Frequency Response (Full Range):	8Hz ~ 250Hz (-3dB)	
Crossover HPF (High Pass Filter):	8Hz ~ 30Hz (-12dB/8°) Variable	
LPF (Low Pass Filter):	60Hz ~250Hz (-12dB/8°) Variable	
BASS BOOST:	Parametric (35 ~ 60Hz) 0 ~ +12dB	
Thermal Management:	Smart Cooler with 2 speeds	
Input Impedance:	10K Ohms	
Protection System:	Output overload, low and high supply voltage	
Minimum Supply Voltage:	9.5VDC	
Maximum Supply Voltage:	16VDC	
Idle Consumption:	1.20A	1.0A
Musical Consumption @14.4VDC:	43A	37A
Rated Power Consumption:	86A	74A
Dimensions (W x H x L):	7.08" x 2.00" x 6.89"	
Weigth:	2.69lb	

*Rated power with 40Hz sinusoidal signal, THD <= 1%, with resistive loads, measured with SMD/AD-1 audio power analyzer or equivalent and the product at lower than 50°C case temperature and 14,4V supply voltage.

The values as above are typical and may vary, due to electronic components tolerance or manufacturing process. For further informations or questions, visit our website or contact TARAMPS ELECTRONICS support.



 +55 18 3266-4050

Fabricado por / Manufactured by:
TARAMPS ELECTRONICS LTDA
CNPJ / TAX ID: 11.273.485/0001-03
R. João Silvério, 121 • Res. Manoel Martins
Alfredo Marcondes - SP
Indústria Brasileira - Made in Brazil
www.taramps.com.br